



How to use Cinderella Classic



1. Check the green light on the control panel, indicating connection to the 230V mains supply.



2. Open the toilet lid and seat.
The ventilation fan starts automatically.



3. Place a bag in the bowl. Use a new bag for each visit to the toilet
4. Lower the seat. The toilet is ready for use.
5. Make use of the toilet. If the amount produced is small, pour in a cup of water, in order to increase the weight sufficiently for the bag to fall down.
6. Close the toilet lid.



7. Press the "Start" button for 1 - 2 seconds. A beep acknowledges the start of the incineration process. The hatch opens and the bag with contents falls down. When the hatch closes, incineration begins. The toilet is now ready for the next visit.
8. A yellow light on the control panel indicates that incineration is in progress. The light will be on during the entire incineration process.
9. The length of the incineration process varies with the amount of waste being processed.

Valuable information for users of Cinderella

1. Always remember to place a bag in the toilet bowl before use. Do not prepare a bag for the next user.
2. The toilet lid must always be down when the toilet is not being used. The incineration process cannot begin until the lid is in the lowered position.
3. After the completion of the incineration process, the yellow light on the control panel turns off. The fan stops when the temperature in the incineration chamber has cooled to 85°C. (This will occur about 1 to 1.5 hour after completion of the incineration process).
4. The toilet should not be connected to the mains during thunderstorms.
5. It is possible to disconnect the mains cable when leaving the house for longer periods of time, for example if not being used during the winter months. Note: The yellow light must be turned off before disconnecting the mains. The battery will begin recharging as soon as the toilet is reconnected to 230V mains power.

Video - using Cinderella

There are more tips and instruction videos available at www.cinderella.as.



If your telephone has a QR reader, view video of using Cinderella.

Emptying indicator

The most important maintenance operation is to empty the ash container at regular intervals. The toilet is equipped with an indicator notifying you when it is time to empty the ash container.

After about 100 incinerations, lights on the control panel will start flashing yellow and red, indicating that it is time to empty the ash container. In addition, a beeper will beep quickly 10 times when you lift the lid.

After 130 incinerations, the lid will be automatically locked. The red and yellow light will be permanently on, and the beeper will sound. It will not be possible to use the toilet until the ash container has been emptied.

Emptying the ash container

It is recommended that you should empty the ash container once a week, or when the system indicates that the container should be emptied.

1. Wait until the toilet has cooled and the fan has stopped. The ash container becomes very hot during the incineration process.
2. Remove the toilet's front hatch.
3. Turn the ash container towards the right until the handle is pointing directly towards you. Pull the ash container out in a straight line.
4. Remove the ash container insert and empty the ash. The ash is clean, dry, free of germs and has no odour. The ash may be used as fertilizer concentrate. No restrictions apply to the disposal of the ash.
5. Clean the container insert to remove salts from urine and charred deposits. (This is described in detail on page 8, Maintenance). The incineration process will be more efficient after the ash container has been carefully emptied and cleaned.
6. Remember to replace the container insert before reinstalling the ash container assembly in the toilet.
7. Turn the ash container to the left until it stops. The toilet will not start unless the container is correctly positioned. (The red and yellow lamp will stop flashing when the ash container is in the correct position).



Flammable liquids, burning objects, cigarettes and similar items must never be placed in the toilet bowl and/or "flushed" into the toilet.

Cinderella - App

If you have a Smartphone you can download a Cinderella web app and get quick access to more information about use, maintenance, etc.



iPhone



Android

Cinderella

TOILET SYSTEMS

Please read this before using the toilet



- 1.** Lift the lid and seat.
The fan will be activated.



- 2.** Place one Cinderella bag in the bowl. A bag must be used every time the toilet is used.




- 3.** Lower the seat.



- 4.** Use the toilet. If very little is produced, pour a few decilitres of water into the bag to make sure that it will drop down properly.



- 5.** Close the lid.

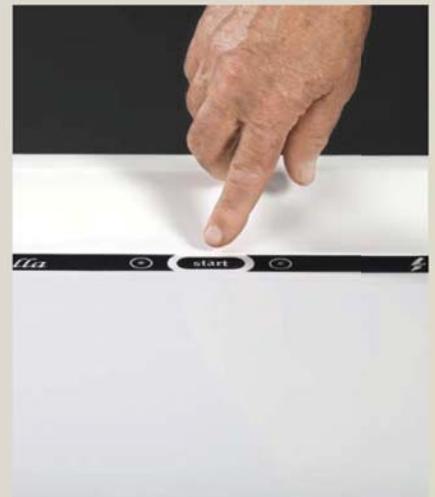

- 6.** Press START.

*Cinderella can be used in the normal way
even while combustion is in progress.*